




Sikkens Autoclear® HS+LV 2 Pack




2:1
Autoclear HS+
LV (Fast/Slow)
Autoclear HS+
LV Hardener

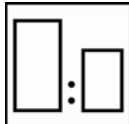

Use Sikkens
Measuring Stick
#1



2x1
HVLP-Siphon
1.8–2.2 mm
HVLP-Gravity
1.3–1.5 mm
Max 10 psi (air
cap)

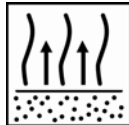

6-10 minutes at
70°F (20°C)



Autoclear HS+
LV 2 pack with
LV LH Hardener
Slow
10 hours at 70°F
(20°C)
30 minutes at
140°F (60°C)



**Use suitable
respiratory
protection.**
Contains acrylic
resins and other
ingredients.
When mixed,
also contains
isocyanates.

**Read complete TDS for
detailed product
information.**



A 2 Pack version of Autoclear HS+ LV designed for use over Autowave. Consisting of two clearcoats and one dedicated hardener,

Autoclear HS+ LV 2 Pack covers all sizes of repairs, under all application conditions, combined with high gloss level over Autowave. Perfect for use with the MPU.

Features	Benefits
Low VOC	Meets the most strict VOC regulations in the US and Canada
Versatile	Use for all applications and conditions
Fewer SKUs	Reduced inventory
Easy mixing	More productivity
Can be used with the Manual Proportioning Unit (MPU)	Ideal for high volume shops for optimal productivity

Sikkens Autoclear HS+LV 2 Pack Slow
Sikkens Autoclear HS+LV 2 Pack Fast
Sikkens Autoclear HS+LV 2 Pack Hardener

Item # 481028
Item # 481027
Item # 481026



To find out more, contact your local AkzoNobel representative, visit www.sikkenscr.com or call 1-877-FOR-AKZO